

# HUSKYLINERS®

## weatherBEATER

### CARE AND USE INSTRUCTIONS

---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Toyota Tundra CrewMax and Double Cab trucks. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

## INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TUNDRA DOUBLE CAB & CREWMAX FRONT FLOOR LINERS



LEFT OR DRIVER'S



RIGHT OR PASSENGER'S SIDE

YOUR TOYOTA TUNDRA MAY HAVE A FACTORY MAT RETAINER INSTALLED WHICH COULD AFFECT THE FIT OF YOUR HUSKY LINER. PLEASE READ THE INSTALLATION NOTES FOR EACH TYPE OF FACTORY MAT BEFORE INSTALLING YOUR LINERS:

**IF YOU HAVE THE FACTORY "CARPET HOOKS"**—YOU WILL NEED TO REMOVE THESE HOOKS TO ALLOW PROPER FIT. THIS IS EASILY DONE BY PULLING THE L-SHAPED HOOK DIRECTLY TOWARD THE MOUNTING HOLE. THIS WILL ALLOW THE HOOK TO "POP" OUT OF THE RETAINING GROMMET. THE HOOKS CAN BE STORED IN YOUR GLOVE BOX FOR REPLACEMENT AT A LATER DATE.

**IF YOU HAVE THE FACTORY TWIST-LOCK RETAINERS,** YOUR LINER WILL NEST OVER THE TOP OF THE RETAINER BUT FIRST YOU MUST ORIENT THE TOP TWIST-LOCK PIECE SO IT IS ALIGNED WITH THE BASE (ARROWS WILL BE POINTING HORIZONTALLY).

# HUSKYLINERS® weatherBEATER

## CARE AND USE INSTRUCTIONS


---

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Toyota Tundra CrewMax and Double Cab trucks. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

### INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TUNDRA DOUBLE CAB & CREWMAX SECOND SEAT FLOOR LINER

FRONT OF VEHICLE

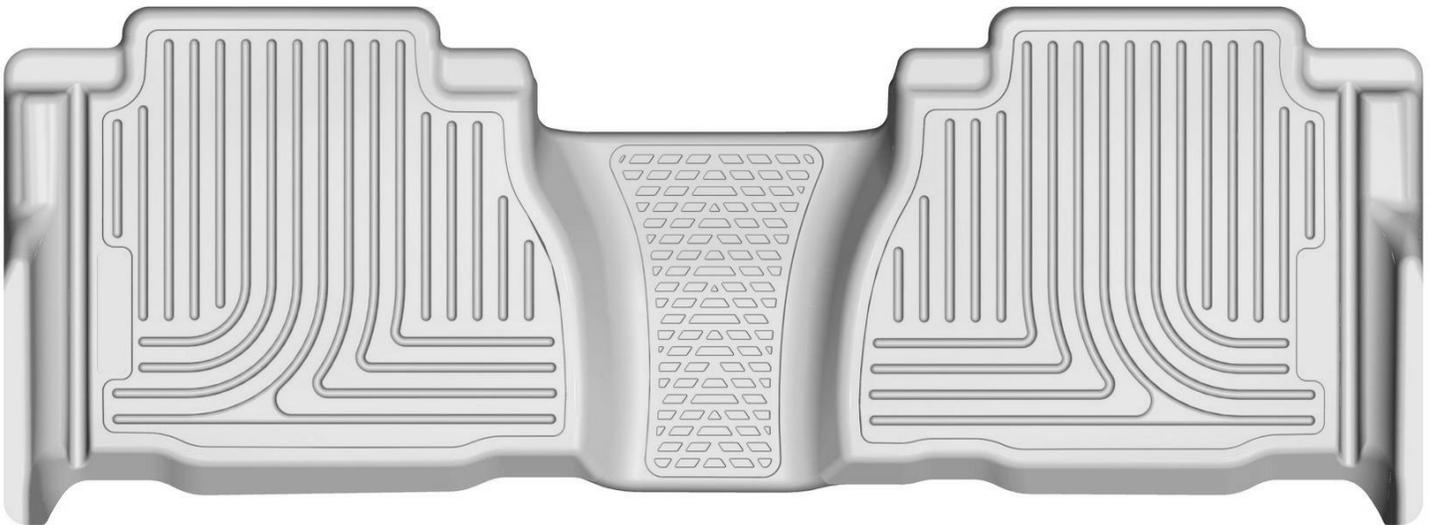

TO EASE INSTALLATION OF YOUR TUNDRA SECOND SEAT LINER, MOVE THE FRONT SEATS TO THEIR MOST FORWARD POSITIONS AND FOLD UP (DOUBLE CAB) OR SLIDE BACK (CREWMAX) THE SECOND ROW SEATS. WITH THIS DONE, INSERT THE LINER IN VEHICLE ANGLING THEM SO THAT THE FRONT EDGE OF THE LINER IS SEATED INTO PLACE FIRST, THEN, LOWERING THE REAR EDGE. ONCE THE LINER IS INSTALLED, REPOSITION THE FRONT SEATS AS DESIRED.